Creative Care Limited

User Manual

Safe&Sound products are not intended to be a replacement for supervision, whilst helping to reduce the risk of Injury they cannot prevent it. We cannot be held responsible for accidents caused by improper use of these products.

CAUTION:

- These products are intended to be soft and safe on the inside only, please treat like normal furniture on the outside.
- To remain safe on the inside do not place hard objects in the safety zone.

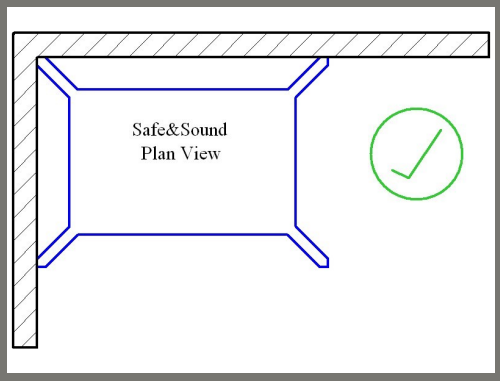

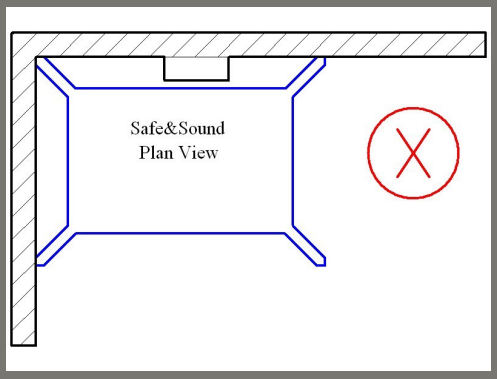

- Ensure that the zip door is only left either totally closed or totally open, if left half open pulling on the door will damage the zip teeth.
- Never force the zips, they always snag for a reason. Try clearing the problem and don't use excessive force. Do not attach long cords to the zip pullers, not only are they dangerous ligatures but if pulled too fast or hard can damage or melt the zip teeth. Periodically give the door zips a light spray with the silicone spray in the maintenance kit.
- In case of Fire keep the special knife provided in the maintenance kit close by but inaccessible to the user. Work out an escape plan in conjunction with your local fire safety officer.
- Ensure NO hard objects are taken into the Safe&Sound, even Lego bricks or biros can be used as tools to cut or make holes in the fabric.

- Periodically check the tensioning of your Safe&Sound. All the tension straps should be tensioned until the black line just appears out of the buckle. These marks ensure that all the panels are kept in the correct position and should therefore not be OVER or UNDER tightened.
- Most stains can easy be removed from PVC although heavy smearing will darken the lighter colours. However Biro and Permanent marker CANNOT be removed so should be kept well away from your Safe&Sound. Trying to remove these stains with Stain devils, bleach etc will damage the fabric.
- Wash only with dilute detergent and or dilute disinfectant. Cream cleaners, bleach, soda or ANY alkali based cleaner will damage the fabric. For heavy soiling-smearing take the product (without the plywood -foam floor panel) outside and use a Jet washer followed by dilute disinfectant, some stubborn stains can be removed with white spirits but please ensure all traces are removed with detergent and water.
- Do not use padlocks, clips or other devices to join the zip pullers together as this could invalidate your fire drill. Please ask us about a zip pocket if this is an issue for you. This feature means that the zip pullers are only visible to people on the outside of the Safe&Sound.

NB: An annual jet wash clean and maintenance service is available.